



4/4 DÖNER SEPET MONTAJ ŞEMASI

B-1

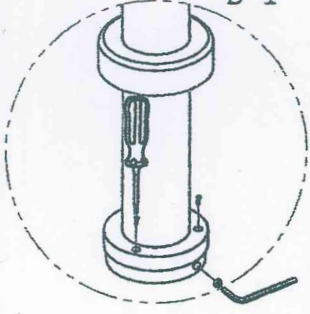


1- Boru üzerine sırasıyla şekil A da görüldüğü gibi parçaları takınız.

B-2

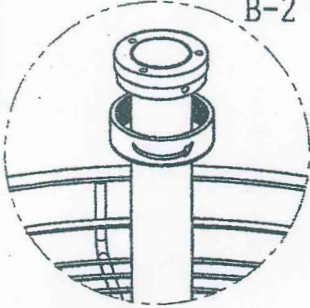

2- Modülün alt ve üst merkezine boru sabitleme flanşlarını sunta vidası ile sabitleyiniz. Daha sonra, boru sabitleme flanşlarının üzerindeki setskur vidaları sıkarak boruyu sabitleyiniz (B-1).


B-3

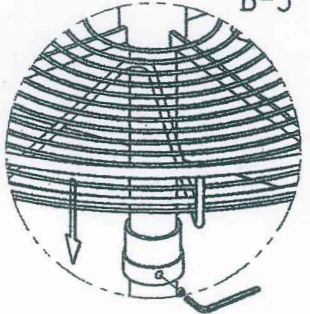


3- Boru sabitleme flanşı üzerine (1 - 8) kapağını (2 - 7) çevirerek kapatınız (B-2).

4- Sepet sabitleme flanşı üzerindeki setskur vidaları sıkarak, boru üzerine sabitleyiniz. Sepeti, sepet sabitleme flanşı üzerine oturtunuz (B-3).

ŞEKİL A

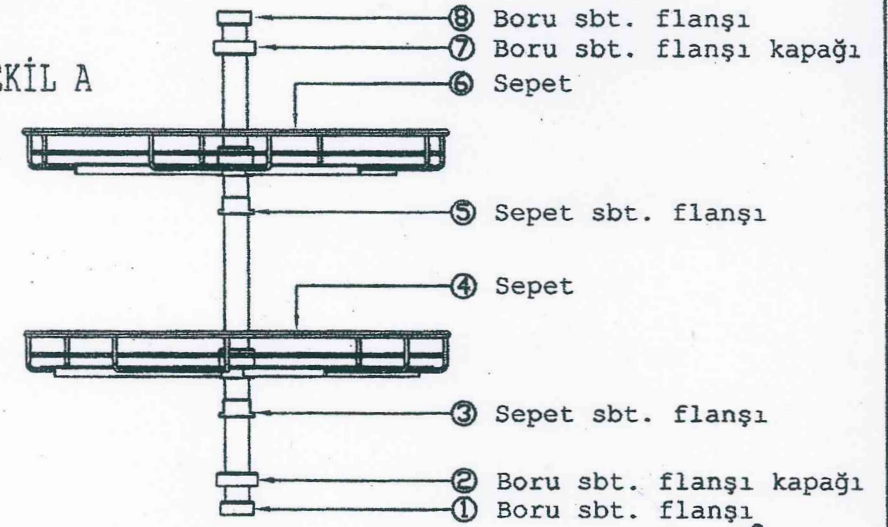

ŞEKİL B

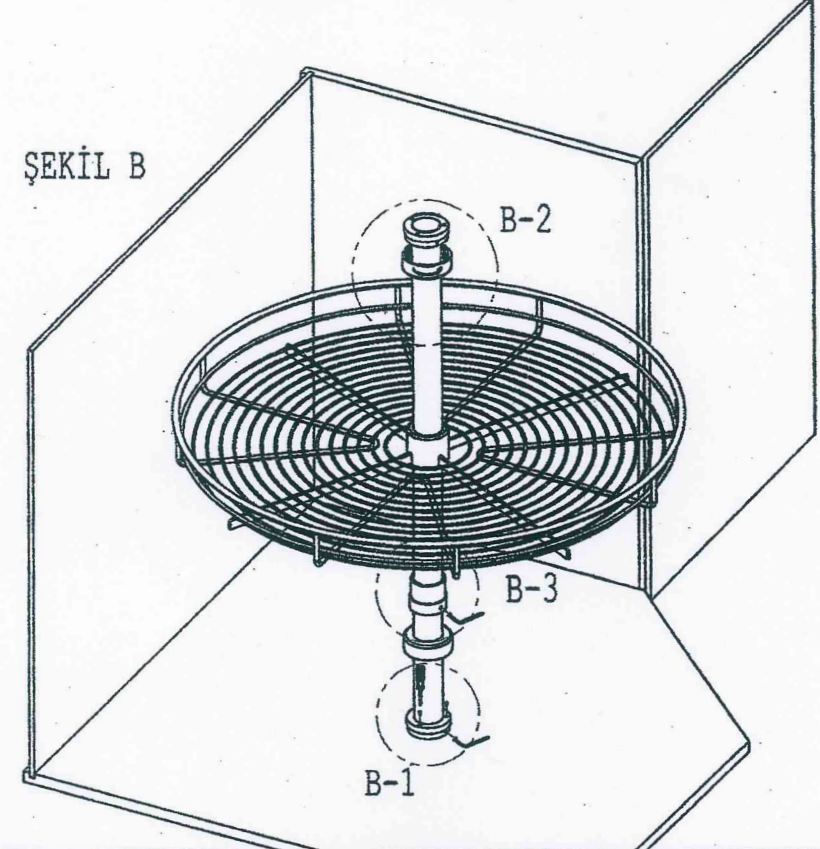


KULLANILAN PARÇALAR

NO	PARÇA ADI	ADET.
1	FLANSLI UZUN BORU	1
2	FLANSLI KISA BORU	1
3	SEPET	2
4	SEPET SABİTLEME PLASTIĞI	2
5	PİM	2
6	KAPAK BAĞLANTI ELEMANI	1
STOK KOD: SMA24		RESİM NO: RSM174


4-4 TURNING BASKET SET MOUNTING INSTRUCTION

B-1

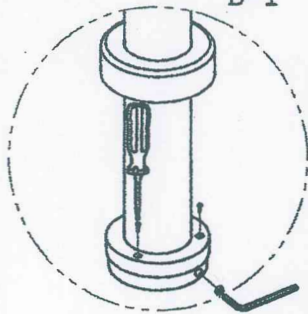


1- Attach to parts in turn on tube (IMAGE A).

B-2

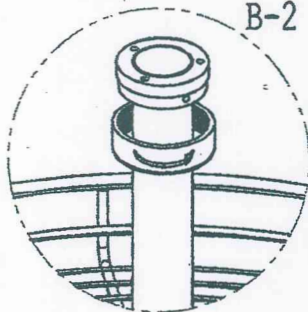

2- Fix to tube fixing flange on top and bottom center of module after tighten to screw on tube fixing flange and fix to tube (B-1).

B-3

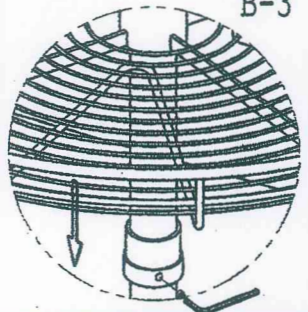

3- Turn over to the fixing tube flange on cover (1 - 8)fixing tube flange(2 - 7) (B-2).

4- Tighten to the screw on the basket fixing flange and fix to its on tube. Put to basket on basket fixing flange(B-3).

ITEMS PART

NO	PART NAME	PCS
1	TUBE	1
2	TUBE FIXING FLANGE	2
3	COVER OF TUBE FIXING FLANGE	2
4	BASKET	2
5	BASKET FIXING FLANGE	2
6	ALLEN KEY	1
7	CHIP BOARD SCREW 3.5x35	6

STOCK CODE: SMA24 IMAGE NO: RSM174

IMAGE A

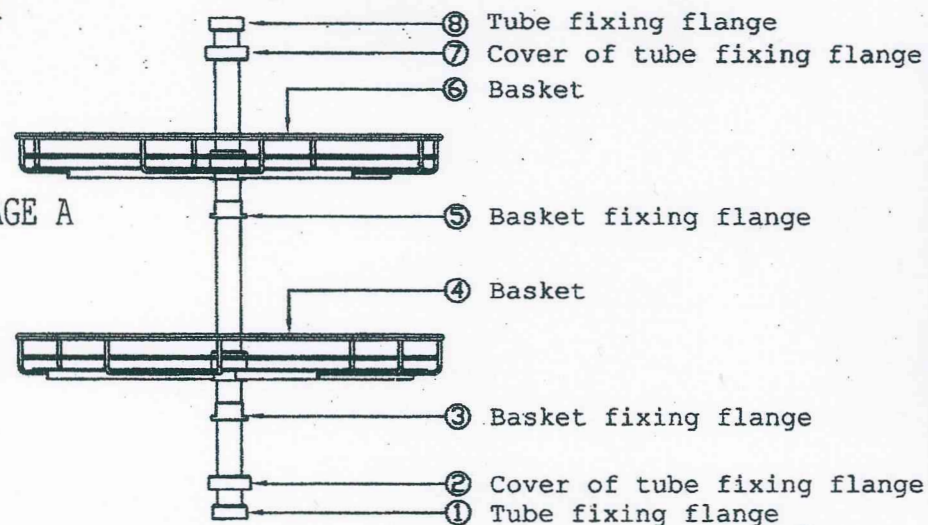


IMAGE B

